

Bullet Feeder Die Assembly Only (.223 Rem)

Ensure flawless, round-by-round feeding. The Armanov Bullet Feeder Die Assembly is precision-machined from heavy-duty, zinc-plated steel, engineered to reliably drop bullets one by one into your press station without skipping or binding.



Designed for maximum versatility, it features a robust tensioning ring and is fully compatible with virtually all popular bullet feeding systems on the market. Every assembly includes premium spare components—such as stainless steel indexing beads and a durable PETG retention clip—to guarantee your reloading bench suffers zero downtime.

Attributes

- Name: Bullet Feeder Die Assembly Only (.223 Rem)
- Manufacturer: ARMANOV
- Product no.: EU2018272
- Mfr. No.: BFDIE223
- Colour: Silver
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Table of Contents

- [Startpage](#)
- [English: Safety Instruction Guide for Bullet Feeder Die Assembly Only \(.223 Rem\)](#)

Safety Instruction Guide for Bullet Feeder Die Assembly Only (.223 Rem)

Introduction

Thank you for choosing the Armanov Bullet Feeder Die Assembly. This guide provides important safety information, usage instructions, and disposal guidelines to ensure safe and effective operation of your product. Please read this guide thoroughly before use.

General Safety Guidelines

- Ensure that the Bullet Feeder Die Assembly is used only for its intended purpose.
- Keep the product out of reach of children and vulnerable individuals.
- Always wear appropriate safety gear, including eye protection, when operating reloading equipment.
- Regularly inspect the Bullet Feeder Die Assembly for any signs of damage or wear. Do not use if damaged.
- Store the assembly in a dry and safe location when not in use.

Specific Safety Precautions for Use

- Always follow the manufacturer's instructions for setup and operation.
- Do not exceed the recommended bullet specifications for the assembly.
- Ensure that the assembly is properly secured to the reloading press to prevent accidents.
- Avoid placing hands near moving parts during operation.
- Do not attempt to modify or disassemble the Bullet Feeder Die Assembly.
- In case of malfunction, stop using the product immediately and consult a professional.

Instructions for Installation and Usage

Installation

1. Prepare Your Workspace

- Ensure your reloading bench is clean and organized.
- Gather all necessary tools and components.

2. Attach the Bullet Feeder Die Assembly

- Locate the die station on your reloading press.
- Carefully screw the Bullet Feeder Die Assembly into the die station until secure.
- Ensure the assembly is aligned correctly for optimal performance.

3. Install Spare Components

- If applicable, install the stainless steel indexing beads and PETG retention clip according to the provided instructions.
- Ensure all components are securely fitted.

Usage

1. Loading Bullets

- Fill the feeder with the appropriate bullets for your reloading process.

- Adjust the tensioning ring as necessary to ensure proper feeding.

2. Operating the Reloading Press

- Begin reloading according to your press's operating instructions.
- Monitor the feeding process to ensure smooth operation.

3. PostUse Care

- After use, clean the assembly to remove any debris or residue.
- Store the assembly in a safe place.

Disposal Instructions

- Dispose of the Bullet Feeder Die Assembly in accordance with local regulations.
- If the product is damaged or no longer usable, consider recycling metal components where possible.
- Do not dispose of the product in regular household waste.

Contact Information for Further Support

For any questions or concerns regarding the Bullet Feeder Die Assembly, please refer to the manufacturer's website or contact their customer support for assistance.

By following these guidelines, you can ensure safe and effective use of your Bullet Feeder Die Assembly. Thank you for your attention to safety.