

Bullet Feeder Die Assembly Only (.40 / 10mm)

Optimize your reloading production. Precision-engineered from heavy-duty, zinc-plated steel, this Bullet Feeder Die Assembly ensures that bullets feed flawlessly—one by one—directly into your press station without skipping or jamming. It offers universal compatibility and absolute reliability during high-volume reloading sessions.



Attributes

- Name: Bullet Feeder Die Assembly Only (.40 / 10mm)
- Manufacturer: ARMANOV
- Product no.: EU2018274
- Mfr. No.: BFDIE40
- Colour: Silver
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Table of Contents

- [Startpage](#)
- [English: Bullet Feeder Die Assembly Safety Instructions](#)

Bullet Feeder Die Assembly Safety Instructions

Introduction

Thank you for choosing the Bullet Feeder Die Assembly. This product is designed to optimize your reloading production by ensuring that bullets feed smoothly into your press station. Please read this safety instruction guide thoroughly to ensure safe and effective use of the product.

General Safety Guidelines

- Ensure that the Bullet Feeder Die Assembly is used only for its intended purpose.
- Always follow the manufacturer's instructions when using this product.
- Keep this product out of reach of children and vulnerable individuals.
- Regularly inspect the Bullet Feeder Die Assembly for any signs of wear or damage.
- Report any unsafe conditions or accidents to the appropriate authorities.
- Stay informed about any recall updates through the EU Safety Gate platform.

Specific Safety Precautions for Use

- Before use, ensure that all components are securely attached and functioning properly.
- Do not exceed the recommended loading capacity of your reloading press.
- Avoid placing hands or any body parts near the feeding mechanism during operation.
- Always wear appropriate safety gear, such as safety glasses and gloves, when using the reloading press.
- Do not attempt to modify or alter the Bullet Feeder Die Assembly in any way.
- If you experience any jamming or malfunction, stop operation immediately and inspect the assembly for issues.

Instructions for Installation and Usage

Installation

1. Prepare Your Workspace:

- Ensure you have a clean, welllit, and organized workspace.
- Gather all necessary tools and materials.

2. Attach the Bullet Feeder Die Assembly:

- Remove any existing die from your reloading press.
- Install the Bullet Feeder Die Assembly by following these steps:
 - Align the assembly with the press.
 - Secure it tightly according to the manufacturer's instructions.
 - Ensure that it is properly seated and does not wobble.

3. Check Compatibility:

- Verify that the Bullet Feeder Die Assembly is compatible with your specific reloading press model.

Usage

1. Loading Bullets:

- Carefully load bullets into the feeder, ensuring they are positioned correctly.
- Do not overload the feeder beyond its capacity.

2. Operating the Press:

- Start the reloading press according to the manufacturer's guidelines.
- Monitor the feeding process to ensure smooth operation.

3. Handling Malfunctions:

- If a bullet fails to feed, stop the press immediately.
- Inspect the assembly for blockages or misalignments.
- Clear any jams before resuming operation.

Disposal Instructions

- Dispose of the Bullet Feeder Die Assembly in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Consider recycling options for metal components, if applicable.

Contact Information for Further Support

For any questions or concerns regarding the Bullet Feeder Die Assembly, please contact the manufacturer or refer to the product manual for additional support.