

Bullet Feeder Die Assembly Only (.45 ACP)

Ensure flawless, round-by-round feeding. The Armanov Bullet Feeder Die Assembly is precision-machined from heavy-duty, zinc-plated steel, engineered to reliably drop bullets one by one into your press station without skipping or binding.



Designed for maximum versatility, it features a robust tensioning ring and is fully compatible with virtually all popular bullet feeding systems on the market. Every assembly includes premium spare components—such as stainless steel indexing beads and a durable PETG retention clip—to guarantee your reloading bench suffers zero downtime.

Attributes

- Name: Bullet Feeder Die Assembly Only (.45 ACP)
- Manufacturer: ARMANOV
- Product no.: EU2018275
- Mfr. No.: BFDIE45
- Colour: Silver
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Table of Contents

- [Startpage](#)
- [English: Bullet Feeder Die Assembly Safety Instructions](#)

Bullet Feeder Die Assembly Safety Instructions

Introduction

Thank you for choosing the Bullet Feeder Die Assembly (.45 ACP) by ARMANOV. This product is designed to enhance your reloading experience by ensuring reliable and efficient bullet feeding. To ensure your safety and the safe use of this product, please read and follow these safety instructions carefully.

General Safety Guidelines

- Always use the Bullet Feeder Die Assembly in accordance with the manufacturer's instructions.
- Ensure that the assembly is compatible with your reloading press before use.
- Keep the assembly out of reach of children and vulnerable individuals.
- Regularly inspect the assembly for any signs of wear or damage.
- Report any unsafe conditions or accidents to the relevant authorities.
- Stay informed about product recalls and safety updates via the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Avoid Overloading:** Do not exceed the recommended bullet capacity of your reloading press.
- **Proper Eye Protection:** Always wear safety glasses when operating the reloading press to protect your eyes from potential debris.
- **Safe Environment:** Use the assembly in a welllit, dry area, free from distractions and hazards.
- **Avoid Loose Clothing:** Do not wear loose clothing or accessories that could become caught in the machinery.
- **Secure the Assembly:** Ensure that the Bullet Feeder Die Assembly is securely attached to your press before use.

Instructions for Installation and Usage

1. Installation:

- Ensure the reloading press is turned off and unplugged.
- Remove any existing die from the press that may interfere with the installation.
- Carefully attach the Bullet Feeder Die Assembly to the press, following the manufacturer's guidelines.
- Tighten the assembly securely to prevent movement during operation.
- Insert the stainless steel indexing beads and retention clip as per the assembly instructions.

2. Usage:

- Load bullets into the feeder according to the product guidelines.
- Turn on the reloading press and monitor the feeding process closely.
- If you notice any skipping or binding, stop the operation immediately and inspect the assembly.
- Maintain a steady pace and do not rush the reloading process to ensure safety and accuracy.

Disposal Instructions

- Dispose of any damaged or worn components of the Bullet Feeder Die Assembly responsibly.
- Follow local regulations for the disposal of metal and plastic materials.
- Do not dispose of the assembly in regular household waste. Instead, take it to a designated recycling center if applicable.

Contact Information for Further Support

For any questions or concerns regarding the Bullet Feeder Die Assembly, please refer to the manufacturer's contact information provided with your product packaging. Always ensure that you have the latest safety updates and product information.

Thank you for prioritizing safety while using the Bullet Feeder Die Assembly. Enjoy your reloading experience!