

Bullet Feeder Die Assembly Only (6.5x55mm)

Maximize your press output. Increase the speed and efficiency of your reloading process with the Armanov Bullet Feeder Die. Precision-engineered from heavy-duty, zinc-plated steel, this die ensures that bullets feed flawlessly—one by one—directly into your press station without skipping or jamming.



Attributes

- Name: Bullet Feeder Die Assembly Only (6.5x55mm)
- Manufacturer: ARMANOV
- Product no.: EU2018276
- Mfr. No.: BFDIE6.5
- Colour: Silver
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Table of Contents

- [Startpage](#)
- [English: Bullet Feeder Die Assembly Safety Instructions](#)

Bullet Feeder Die Assembly Safety Instructions

Introduction

Thank you for choosing the Armanov Bullet Feeder Die Assembly. This product is designed to enhance your reloading process by maximizing output and efficiency. To ensure safe and effective use, please read and follow these safety instructions carefully.

General Safety Guidelines

- Always ensure the product is used in accordance with the manufacturer's instructions.
- Keep the Bullet Feeder Die Assembly out of reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of damage or wear before use.
- If you notice any irregularities during operation, cease use immediately and consult the manufacturer.
- Report any unsafe products or accidents to the relevant authorities.
- Stay informed about product recalls and safety updates through the EU Safety Gate platform.

Specific Safety Precautions for Use

- Use only with compatible reloading presses to avoid malfunctions.
- Ensure that the workspace is clean and free from obstructions before starting the reloading process.
- Always wear appropriate personal protective equipment, such as safety glasses and gloves.
- Avoid loose clothing or accessories that may get caught in the machinery.
- Do not exceed the recommended bullet specifications for the die assembly.
- Always follow the reloading guidelines provided by the bullet manufacturer.

Instructions for Installation and Usage

1. Installation:

- Ensure that your reloading press is turned off and unplugged.
- Carefully remove the Bullet Feeder Die Assembly from its packaging.
- Attach the die assembly to the reloading press according to the manufacturer's instructions.
- Tighten all screws and fittings to ensure a secure installation.
- Check that the die is properly aligned with the press station.

2. Usage:

- Load bullets into the feeder as per the manufacturer's guidelines.
- Turn on the reloading press and begin the reloading process.
- Monitor the operation closely to ensure that bullets are feeding correctly.
- If a jam occurs, stop the press immediately and clear the obstruction before continuing.
- After completing the reloading session, turn off and unplug the press.

Disposal Instructions

- Dispose of the Bullet Feeder Die Assembly in accordance with local waste management regulations.
- Do not dispose of the product in regular household waste if it contains hazardous materials.
- Consider recycling options where available to minimize environmental impact.

Contact Information for Further Support

For any questions or concerns regarding the Bullet Feeder Die Assembly or safety instructions, please reach out

to the manufacturer through the provided contact channels.