

Bullet Feeder Die Assembly Only (9mm / .38 Super)

Optimize your reloading production. Precision-engineered from heavy-duty, zinc-plated steel, this Bullet Feeder Die Assembly ensures that bullets feed flawlessly—one by one—directly into your press station without skipping or jamming. It offers universal compatibility and absolute reliability during high-volume reloading sessions.



Attributes

- Name: Bullet Feeder Die Assembly Only (9mm / .38 Super)
- Manufacturer: ARMANOV
- Product no.: EU2018277
- Mfr. No.: BFDIE9MM
- Colour: Silver
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Table of Contents

- [Startpage](#)
- [English: Bullet Feeder Die Assembly Safety Instructions](#)

Bullet Feeder Die Assembly Safety Instructions

Introduction

Thank you for choosing the Bullet Feeder Die Assembly (9mm / .38 Super). This product is designed to optimize your reloading production by ensuring that bullets feed smoothly into your press station. To ensure safe and effective use, please read this safety instruction guide carefully.

General Safety Guidelines

- Always use the Bullet Feeder Die Assembly in accordance with the manufacturer's instructions.
- Ensure that the workspace is clean, organized, and free from distractions.
- Keep the product out of reach of children and vulnerable individuals.
- Inspect the Bullet Feeder Die Assembly for any signs of damage before use.
- Report any unsafe products or accidents to the relevant authorities.
- Stay informed about product recalls and safety updates by checking the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Hazard Identification:**
 - Improper installation may lead to malfunction, which can cause injury or damage.
 - Using the assembly with incompatible bullets may result in jamming or other issues.
- **Avoiding Hazards:**
 - Always ensure that the assembly is securely attached to the reloading press before use.
 - Do not overload the assembly beyond its designed capacity.
 - Regularly check for obstructions or debris that may interfere with bullet feeding.
- **Age Restrictions:**
 - This product is intended for use by individuals aged 18 and older.
 - Ensure that anyone using the product has received proper training in reloading safety.

Instructions for Installation and Usage

- **Installation:**
 1. Ensure that the reloading press is turned off and unplugged before installation.
 2. Remove any existing die from the press and clean the area.
 3. Align the Bullet Feeder Die Assembly with the press station.
 4. Securely fasten the assembly in place according to the manufacturer's instructions.
 5. Check for stability and ensure that the assembly is properly aligned.
- **Usage:**
 1. Load the bullets into the feeder according to the manufacturer's guidelines.
 2. Turn on the reloading press and begin the reloading process.
 3. Monitor the operation closely to ensure that bullets are feeding correctly.
 4. If you encounter any issues, stop the press immediately and inspect the assembly.

Disposal Instructions

- Dispose of the Bullet Feeder Die Assembly according to local regulations.
- Do not dispose of the product in regular household waste.
- Consider recycling components where possible to minimize environmental impact.

Contact Information for Further Support

For any inquiries or support regarding the Bullet Feeder Die Assembly, please refer to the manufacturer's contact information provided with your product.

Thank you for following these safety instructions. Enjoy your reloading experience with confidence and safety!